

JS04套装

说明书（7折页）

尺寸：630X90(h) mm

材质：特种纸（超感纸 157g）

工艺：风琴折

LED LIGHT ACCESSORY

02

1 KEY FEATURES

— **Parameters:** 1. **Standby Time:** About 15 days **Continuous:** About 2 hours.
2. **Light Colors:** Solid Red, Blue, Green, Marquee, White Flashlight

— **Function:** 1. Front LED Flashlight w/ Multi-Color LED Side Lights.
2. Leash attachment, illuminates the pathway, provides better visibility in low-light conditions.

2 HOW TO USE

SWITCHING THE LIGHT MODES:

1. Press the button once: turns ON the Main Flashlight.
2. Press the button twice: turns ON the flashlight and the surrounding marquee light.
3. Press the button three times: turns ON the flashlight and the surrounding light Fade.
4. Press the button four times: turns ON the surrounding Fade light only.
5. Press the button five times: turn OFF the surrounding Fade light.

LIGHT MODES:
Flashlight: White Light.
Battery Power Indicator Lights: The four blue LED lights indicate the battery level, as the battery power decreases the number of lights decrease.
Marquee Light: Red-Green-Blue Cycle.
Pulse Light: 6 colors cycle and fade; White-Red-Green-Blue-Yellow-Cyan.

3 ATTENTION

CHARGING:

1. Plug the included USB cable into the LED light and the other end into a USB power adapter, then plug into a power outlet (power adapter not-included).
2. The Red light illuminates when the battery is low and/or during the charging process. The light changes to Green when fully charged.

ATTACH TO THE LEASH:
Attached the Light accessory onto the left side of the compatible retractable leash body by first unscrewing the protective disk cover (left side) from the leash body. Screw the LED light onto the Leash body, do not over-tighten as it could potentially strip the screw threads.

WARNING

WASTE BAG BOX

03

1 KEY FEATURES

— **Color:** Black
— **Function:** 1. Holds and distributes waste bags, it can also be used to store snacks or other personal items.
2. Screws onto the right side of the leash body.
3. Hold's standard size waste bag rolls.

2 OPERATING INSTRUCTION

1. Open the cap by pulling the rubber tab outwards. Insert a bag roll into the box, feed the bag through the slot. Reattach the cap.
2. Unscrew the cover disc from the right side of the leash body, screw the Waste Bag Box onto the leash body, DO NOT OVER-TIGHTEN.

SMART RETRACTABLE LEASH SET USER MANUAL

SMART RETRACTABLE LEASH SET

01

1 KEY FEATURES

1. **Patented:** Shape design, leash outlet and switch mechanism
2. **Slide Lock Switch:** Reliable, safe and easy to control switch mechanism with a built-in metal brake ensures a safe and secure lock.
3. **High-Quality Tension Spring:** Stainless Steel spring provides a smooth yet durable retraction
4. **Shock-Proof Retraction:** Integrated PVC cushion minimizes hard leash retractions.
5. **Interchangeable Accessories:** LED Light, Waste Bag Box.

2 OPERATING INSTRUCTIONS

1. Connect the leash hook to the "D" Ring of the Dog collar or Harness.
2. Grasp the leash handle and allow the leash tape to extend with the dog in walking motion.
3. Press the brake button to stop your dog and limit his range of movement.

① Slide Switch Forward to Release ② Slide Backward to Stop

3 PRECAUTIONS

WARNING

1.The user of this retractable leash must be physically able to control the weight of the pet and familiar with the operating instruction of this product. Always be mindful and fully in control of the pets movement at all times. Children and those who lack the ability to follow the above listed conditions, due to risk of injury are prohibited from use of this retractable leash device.
2.Inspect all parts for damage or malfunction before each use. Do not use in the case of a failed inspection or malfunction. Avoid contact with sharp objects or allow pets to chew on the leash tape or body. This product is made of high quality materials but is subject to normal wear and tear, and even malfunction through long-term use.
3.Use only in conjunction when attached to a pet collar. Never wrap the leash tape around the pet to avoid strangulation.
4.Due to the high tension, use care when retracting to avoid whiplash of the leash, never disassemble or expose the coil spring. Avoid holding onto the leash tape or allowing it to wrap around the body of the pet which could lead to rope burns, cuts or strangulation.
5.This is not a toy, keep out of the reach of children.
6.Avoid sudden brake stops while the pet is in full motion, this could injure the pet and damage the internal mechanism of the leash.
7.Use only while walking your pet, never use alongside of a moving motor vehicle or bicycle.

3 PRECAUTIONS - CONTINUED

8. Keep the bags away from and out of the reach of children.
9. Dispose of the waste bags into a proper waste disposal bin. Do not dispose or flush the bag in a toilet.

4 MAINTENANCE

1. Clean leash tape and the outside of the leash body with mild soap. Allow the leash tape to fully dry before retracing back into the leash body. Avoid water or moisture from entering into the leash body, never submerge into water which could damage the internal components of the device.
2. Never allow harsh or diluted chemicals to come in contact with this product.

Entrusting Party: Dogness Group LLC
Address of Entrusting Party: 4114 W Spring Creek Pkwy, Plano, TX 75024
Manufacturer: Jiasheng Enterprise Co., Ltd.
Address of Manufacturer: No.18 Dongkebei Road, Tongsha Industrial Zone, Dongcheng District, Dongguan, Guangdong, China 523127
Website: www.dogness.com